

# ViTREK QuickTest Pro

## Default User Name and Password

---

The user is recommended to save this document in a secure location.

When Vitrek QuickTest Pro is first used the user must log in using the default user name and password. This may also become necessary later should the users file of user names and passwords become inaccessible.

The default user name is **VitreKFullUser** and the password is **VitreK**. Note that user names and passwords are case sensitive in QuickTest Pro. Using these gives the user full access to all of the features of QuickTest Pro.